


12 ATRA ACE WA-3500 MOTOR ASSEMBLY AND PARTS LIST

⚠ WARNING

The illustration is for information only. Users should never disassemble parts. Contact the sales agent from whom you purchased the tool or an authorized dealer should the tool need service, repair or replacement of parts.

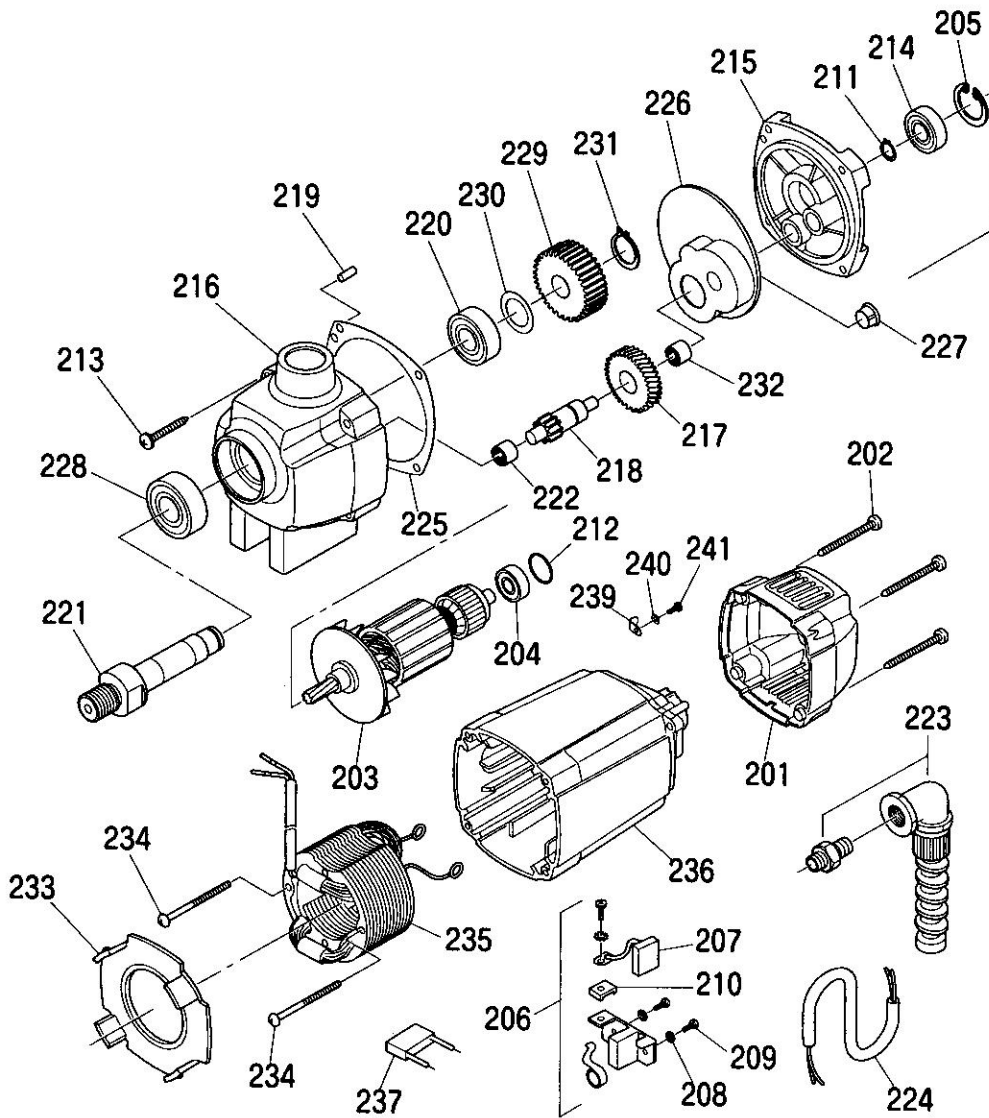

No.	Part No.	Part Name	Q'ty	Price
201	TQ06818	Cap	1	
202	TQ06819	Self Tapping Screw HC4.8 X 45	4	
203	TB05194	Armature Ass'y 110-120V	1set	
	TB05195	Armature Ass'y 220-230V	1set	
204	TP00468	Ball Bearing 608ZZ	1	
205	TP01036	Internal Retaining Ring C28	1	
206	TB05193	Brush Holder Ass'y	2set	
207	(TB05187)	Carbon Brush Ass'y	1set	
208	(TQ06820)	Spring Washer B4	2	
209	(TQ06828)	Screw ZM4 X 12	2	
210	(TQ06838)	Contact Washer	1	
211	TP04595	External Retaining Ring C10	1	
212	TQ06839	O-Ring 22 X 2.5	1	
213	TQ06840	Self Tapping Screw HC4.8 X 50	4	
214	TP00498	Ball Bearing 6001ZZ	1	
215	TQ06841	Bearing Bracket	1	
216	TQ06827	Gear Case	1	
217	TQ06821	Intermediate Gear 34Z	1	
218	TQ06822	Pinion Shaft 10Z	1	
219	TQ06842	Notched Pin 4 X 12	1	
220	TQ06829	Ball Bearing 6003LLU	1	
221	TQ06823	Spindle	1	

No.	Part No.	Part Name	Q'ty	Price
222	LQ02395	Needle Roller Bearing HK1010	1	
223	TQ06824	Cord Protector	1	
224	TQ06843	Connecting Cable	1	
225	TQ06844	Gear Case Seal	1	
226	TQ06825	Grease Chamber	1	
227	TQ06845	Plug	1	
228	TQ06830	Ball Bearing 6203LLU	1	
229	TQ06826	Spindle Gear 43Z	1	
230	TQ06846	Fitting Washer 17 X 24 X 0.2	1	
231	TQ06847	External Retaining Ring C17	1	
232	TQ00754	Needle Roller Bearing HK0810	1	
233	TQ06848	Air Guiding Ring	1	
234	TQ06849	Self Tapping Screw HC3.9 X 60	2	
235	TB05191	Stator Ass'y 110-120V	1set	
	TB05192	Stator Ass'y 220-230V	1set	
236	TQ06850	Motor Housing	1	
237	TQ06851	Condenser	1	
238	TQ06852	Insulating Tubing	1	
239	TQ06853	Mounting Clip	1	
240	TQ06854	Disk 3.2	1	
241	TQ06855	Self Tapping Screw HC2.9 X 9.5	1	